

Adjusting JumpStarts for Height

Materials:

Scissors

Pen or Pencil

Container of boiling water

Optional:

Emery Board

